


---

# QUICK START INSTRUCTIONS

## For your Berner Air Curtain with Intelliswitch™

[www.intelli-how2.com](http://www.intelli-how2.com)

---

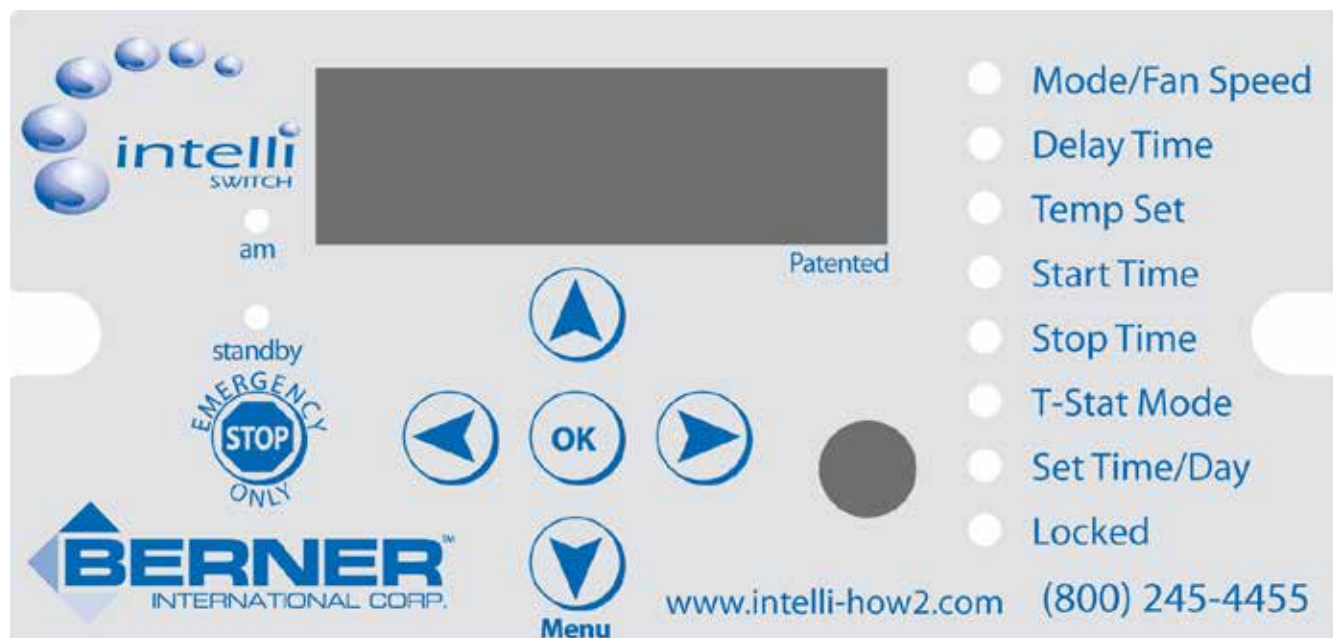

### Mode/Fan Speed:

**Mode:** Select your mode of operation (see steps on page 2)

**Fan Speed:** Sets the speed of the fan

**Delay Time:** Amount of time the air curtain is to run after the door closes

**Temp Set:** Determines when heat is activated

**Start Time:** Programmable time of day air curtain becomes active

**Stop Time:** Programmable time of day air curtain stops running

**T-Stat Mode:** Set only heat or heat & fan (auto mode only)

**Set Time/Day:** Programmable clock

**Locked:** Unit will run as programmed but settings cannot be changed

### IMPORTANT NOTE!

**If your air curtain unit is in "Locked" mode when you receive it:**

Press and hold the left and right arrows simultaneously for 5 seconds to unlock.

## STEP ONE



To Start: Press the Down Arrow button once.  
*NOTE: To change from "Mode" to "Fan Speed" press the down arrow twice.*

## STEP TWO



Use the Left and Right Arrows to scroll through the 8 available modes of operations

### 5 Standard Mode of Operation Options:

**OFF**

**Door opens:** The air curtain is off  
**Door shuts:** The air curtain is off

**ON**

**Door opens:** The air curtain activates  
**Door shuts:** The air curtain continues to run

**AUTO**

**Door opens:** The air curtain activates  
**Door shuts:** The air curtain turns off

**DELU**

**Door opens:** The air curtain activates  
**Door shuts:** The air curtain continues to run for a minimum of 60 seconds

**PLUS**

*For heated units only*

**Door opens:** The air curtain and heater activate and run at set speed  
**Door shuts:** The air curtain continues to run for a minimum of 60 seconds. If thermostat is not satisfied, air curtain and heater continue to run until thermostat is satisfied. If thermostat drops below set temperature, the heater and air curtain will run until thermostat is satisfied.

### 3 Customizable Mode of Operation Options:

*(See Installation Instructions for programming directions)*

**PRO1**

*For unheated units only*

**PRO2**

*For heated units only*

**PRO3**

*For heated units only*

## STEP THREE

**OK**

Once the **Mode of Operation** is selected, press the "OK" button