

QUICK START INSTRUCTIONS

For your *Berner Air Curtain with Intelliswitch™ Gen4*

www.Berner.com/intelliswitch



NOTE – to navigate, use ▲ ▼ to select setting
use + – to change setting,
then press ✓ to enter the setting.

Stop: Immediately stops the air curtain and changes mode to **OFF**

"i": info button provides controller status and diagnostic data

Mode/Fan Speed:

Mode: Select your mode of operation (see next page)

Fan Speed: Sets the fan speed

Delay Time: Sets the amount of time the air curtain runs after the door closes

Temp Set: Sets the temperature the air curtain will maintain (heated units only)

Start Time: Programs the time of day the air curtain becomes active

Stop Time: Programs the time of day the air curtain stops running

Set Time/Day: Sets the clock time and day (used by programming)

Locked: Unit will run as programmed but settings cannot be changed

NOTE: Start/Stop time must be the same for the air curtain to operate continuously.

IMPORTANT NOTE!

If your air curtain unit is in "Locked" mode when you receive it:

Press and hold the + for 5 seconds to unlock.

STEP ONE





To Start: Press the down arrow button once.

NOTE: To change from "Mode" to "Fan Speed" press the down arrow twice.

STEP TWO



Use the   buttons to scroll through the available modes of operations.



Standard Mode of Operation Options:

OFF

Door opens: The air curtain is off.

Door shuts: The air curtain is off.

ON

Door opens: The air curtain activates immediately when mode is selected.

Door shuts: The air curtain continues to run.

AUTO

Door opens: The air curtain activates.

Door shuts: The air curtain turns off, after time delay expires.

PLUS

For heated units only

Door opens: The air curtain and heater (if temperature is below thermostat setting) activate and run at set speed.

Door shuts: The air curtain turns off after the time delay expires. If thermostat is not satisfied, air curtain and heater continue to run until the thermostat is satisfied. If the thermostat drops below set temperature, the heater and air curtain will activate and run on a low speed until the thermostat is satisfied.


Customizable Mode of Operation Options:

See www.berner.com/intelliswitch for programming directions

(Section 5, Program Menu).

STEP THREE



Once the **Mode of Operation** is selected, press the  button.